


- **Great range**
- **Higher precision**
- **For 1/2" chains with a roller diameter 7.75 mm**


1. Elongate the chain wear indicator.



2. Place the indicator with one blade on the roller diameter (Pos. A).

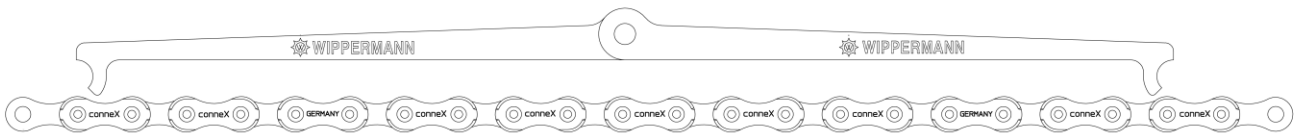

3. Lift the center of the indicator (B) until the blade (C) slides into the roller diameter.

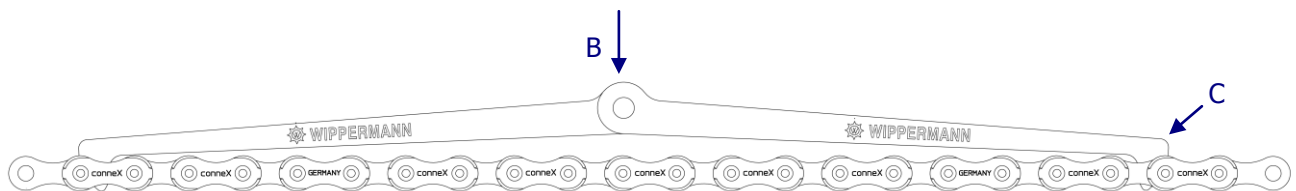

4. If the elongated indicator rest on the rolls, the chain must be changed.

