



1. Insert one half of the Connex link into the end of the chain that comes from the chain ring.



2. Place the other half in the end of the chain that comes from the rear derailleur..

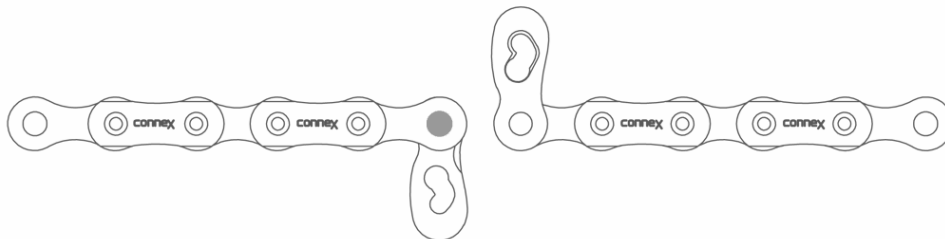

3. Position the chain ends on top of each other and insert the pins from each link into the corresponding receiving holes on the opposite link.

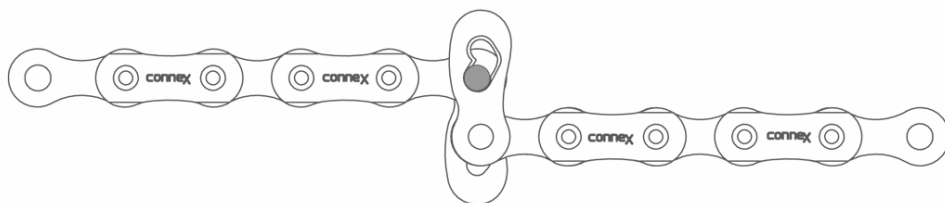

4. Release the chain. Due to the slots of the pins the plates slide into the final position



### Caution!

Check to ensure that you've done this properly (everything should have gone together smoothly) before riding your bike.

Address:  
Tel:  
Fax:  
Homepage:

Wippermann jr. GmbH - 58091 Hagen - Delsterner Strasse 133  
+49-2331 / 782 - 0  
+49-2331 / 782 - 425  
www.connexchain.com - E-Mail: bike@wippermann.com